


PY SERIE 43 43026

Diagramma portata - Diagramme de charge - Leistungsdiagramme - Capacity chart - Diagrama de carga

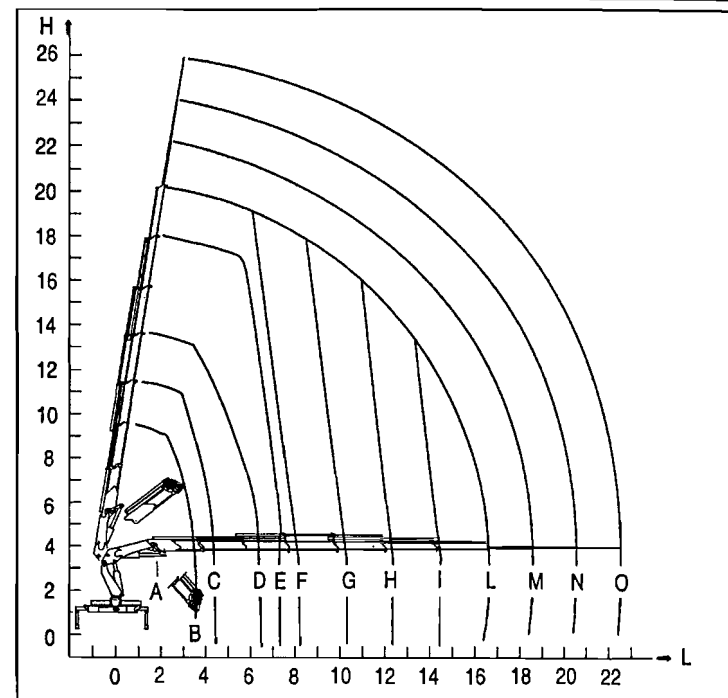

	A	B	C	D	E	F	G	H	I	L	M	N	O	P	Q	R	S	T	U	V	Z	X	
ϕ	20,00	10,00	8,95	6,10	5,20	4,55	3,50	2,80	2,30	1,95	1,50	1,25	1,00										
t	-	-	-	-	-	3,00	2,75	2,50	2,00	1,50	1,30	1,05	0,80										
\rightarrow L	1,90	3,85	4,45	6,30	7,15	8,15	10,20	12,25	14,45	16,65	18,45	20,30	22,20										
m																							
\uparrow H	5,30	9,50	11,50	13,60	18,00	20,10	20,10	20,10	20,10	20,10	21,90	23,70	25,60										

Per maggiori informazioni consultare il manuale di "Uso e Manutenzione" in dotazione alla macchina.
 Pour avoir plus d'informations, consultez le manuelle d'Usage et d'Entretien joint à la machine.
 Für weitere Informationen lesen Sie bitte die der Maschine beiliegende Bedienungs- und Wartungsanleitung.
 For further information, consult the Operator's Manual supplied with the machine.
 Para mayores informaciones consultar el manual de Uso y Manutención suministrado con la maquina.

5.472.288